
TABLE OF CONTENTS

SAFETY NOTICE	VIII
INTRODUCTION	IX
GENERAL INFORMATION.....	IX
VEHICLE INFORMATION	X
ENGINE EMISSIONS INFORMATION	X
SELF-LOCKING FASTENERS PROCEDURE	XI
LOCTITE® APPLICATION PROCEDURE	XI
TIGHTENING TORQUES	XIV
MANUAL INFORMATION	XVI
01 MAINTENANCE	
01 – MAINTENANCE CHART.....	1
MAINTENANCE CHART	1
02 – PRESEASON PREPARATION.....	5
03 – STORAGE PROCEDURES.....	7
FUEL STABILIZER.....	7
ENGINE LUBRICATION.....	7
RAGS INSTALLATION.....	7
COOLANT DENSITY	8
DRIVE AND DRIVEN PULLEYS PROTECTION.....	8
VEHICLE CLEANING.....	8
VEHICLE PROTECTION.....	8
04 – SPECIAL PROCEDURES.....	9
TURN OVER	9
ATV IMMERSION	9
02 TROUBLESHOOTING	
01 – TROUBLESHOOTING CHART.....	11
ELECTRICAL SYSTEM.....	11
COOLING SYSTEM	12
MAGNETO SYSTEM	13
LUBRICATION.....	14
CYLINDER AND HEAD	15
CRANKSHAFT	15
GEARBOX.....	15
COUPLING UNIT	17
CVT	17
ENGINE GENERAL	20
03 ENGINE AND GEARBOX (V490/V660/V810)	
01 – ENGINE REMOVAL AND INSTALLATION.....	25
GENERAL.....	26
PROCEDURES	26
ENGINE REMOVAL	26
ENGINE INSTALLATION	32
ENGINE MOUNT REPLACEMENT	33
02 – AIR INTAKE SYSTEM.....	35
GENERAL.....	37
PROCEDURES	37
AIR FILTER	37
AIR FILTER HOUSING	37
RESTRICTOR	39
03 – EXHAUST SYSTEM.....	41
GENERAL.....	42
PROCEDURES	42