

HOW TO USE THIS MANUAL

Sections 1 through 3 apply to the whole FOURTRAX, while sections 4 through 16 describe parts of the FOURTRAX, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration and all the required specifications, torque values, general instructions, tools and troubleshooting for the section. The subsequent pages give detailed procedures.

If you don't know what the source of a problem, refer to section 17, TROUBLESHOOTING.

All information, illustrations, directions and specifications included in this publication are based on the latest product information available at the time of approval for printing.

Honda Motor CO., LTD. reserves the right to make changes at any time without notice and without incurring any obligation whatever.

No part of this publication may be reproduced without written permission.

HONDA MOTOR CO., LTD.
Service Publications Office

CONTENTS

	GENERAL INFORMATION	1
	LUBRICATION	2
	MAINTENANCE	3
ENGINE	FUEL SYSTEM	4
	ENGINE REMOVAL/INSTALLATION	5
	CYLINDER HEAD/VALVES	6
	CYLINDER/PISTON	7
	CLUTCH/OIL PUMP/KICK STARTER	8
	ALTERNATOR/GEARSHIFT LINKAGE	9
	CRANKCASE/TRANSMISSION/ CRANKSHAFT	10
CHASSIS	FRONT WHEEL/SUSPENSION/STEERING	11
	REAR WHEEL/DRIVE MECHANISM	12
	REAR SUSPENSION	13
	HYDRAULIC BRAKES	14
	FENDERS/EXHAUST SYSTEM	15
	ELECTRICAL SYSTEM	16
	TROUBLESHOOTING	17
	INDEX	18